


Quick guide — — Remote Touch



No.	Name	Function	Page
1	“MENU” button	Push this button to display the “Start” (menu) screen.	17
2	“∧・∨” button	Push this button to change the scale of the map and to scroll the list screen.	31, 35, 47
3	“MAP/VOICE” button	Push this button to repeat a guidance voice, cancel the map scroll, start guidance and display the current position.	38
4	Remote Touch knob	Move this knob in the desired direction to select a function, letter and map screen button.	31
5	“ENTER” button	Push this button to enter the selected function, letter or map screen button.	31
6	“DISP” button	Push this button to display the “Display” (quality control) screen.	36

— Map screen

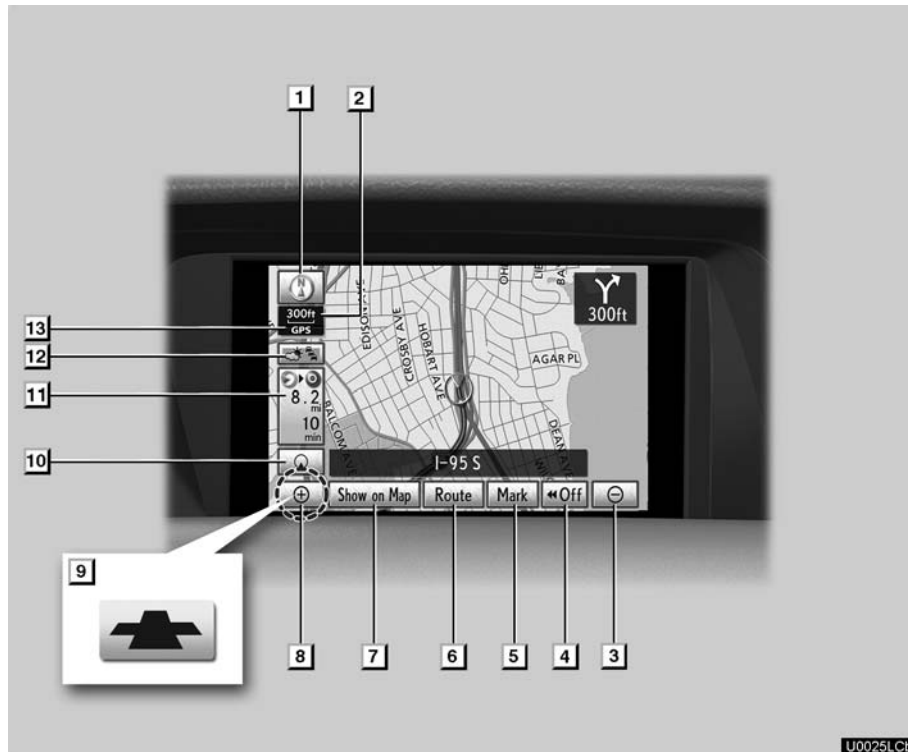

No.	Name	Function	Page
1	North-up or heading-up symbol	This symbol indicates a map view with north-up or heading-up. Selecting this symbol changes the map orientation.	48
2	Scale indicator	This figure indicates the map scale.	47
3	Zoom out button	Select this button to reduce the map scale.	47
4	“◀◀Off”	Select this button to obtain a broader view. Some of the buttons on the screen are not displayed. They are displayed again by selecting “On▶▶” .	331
5	“Mark”	Select this button to register the current position or the cursor position as an address book entry.	40
6	“Route”	Select this button to change the route.	98, 100

No.	Name	Function	Page
7	“Show on Map”	Select this button to browse information about guidance route, to set the Points of Interest to be displayed on the screen, or to record the route.	106, 112
8	Zoom in button	Select this button to magnify the map scale.	47
9	Foot print map button	Select this button to display the foot print map and the building information.	47
10	Screen configuration button	Select this button to change the screen mode.	44
11	Distance and time to destination	Displays the distance, the estimated travel time to the destination, and the estimated arrival time at the destination.	97
12	XM® indicator	This mark is displayed when XM® information is received.	112
13	“GPS” mark (Global Positioning System)	Whenever the vehicle is receiving signals from the GPS, this mark is displayed.	390


— Registering home



1 Push the “MENU” button.



2 Select “Destination” and push the “ENTER” button.

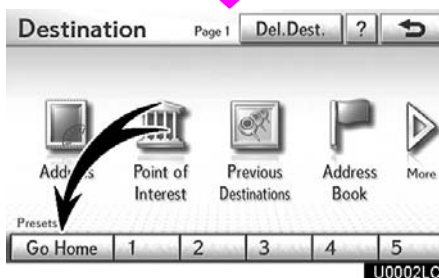

3 Select “Go Home” and push the “ENTER” button.

If home has not been registered, you can register it by selecting “Go Home”.




4 Select “Yes” and push the “ENTER” button.



U0004LC



U0005LC

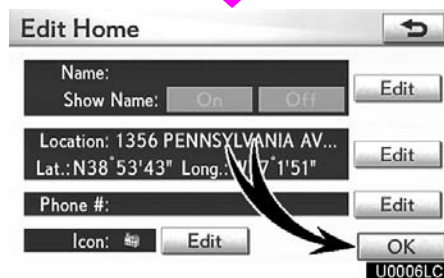

U0006LC

5 There are 4 different methods to search your home.

See "Destination search" on page 66.

6 Select "Enter" and push the "ENTER" button.

The "Edit Home" screen is displayed.

7 Select "OK" and push the "ENTER" button.

Registration of home is complete.


You can also register home by selecting "Setup". (See "(a) Registering home" on page 117.)

You can change the name, location, phone number and icon. (See "(b) Editing home" on page 118.)


— Registering preset destinations



1 Push the “MENU” button.

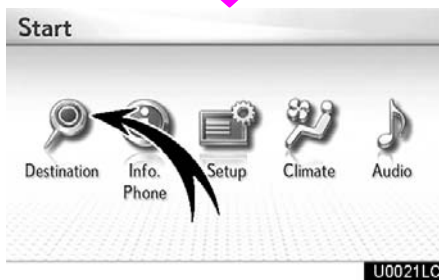

2 Select “Destination” and push the “ENTER” button.

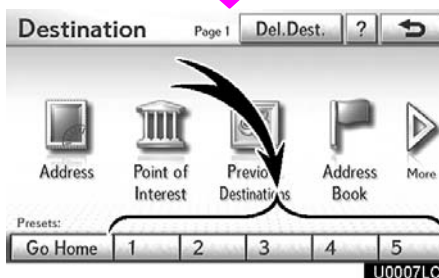


3 Select one of the preset destination buttons and push the “ENTER” button.


You can set a preset destination to any preset destination button that has not yet been set.



4 Select “Yes” and push the “ENTER” button.

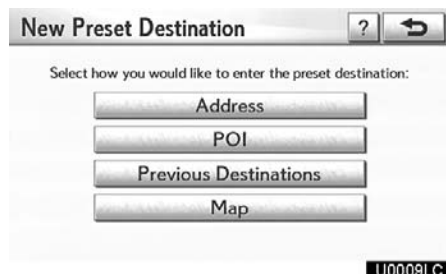

U0009LC

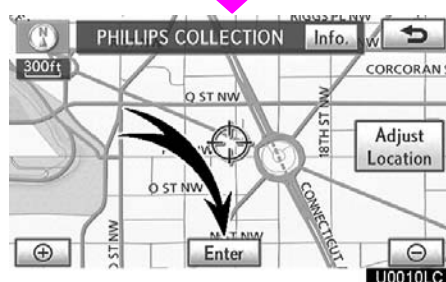

U0010LC



U0011LC

5 There are 4 different methods to search preset destinations.

See "Destination search" on page 66.

6 Select "Enter" and push the "ENTER" button.

The "Edit Preset Destination" screen is displayed.

7 Select "OK" and push the "ENTER" button.

Registration of preset destinations is complete.

You can also register preset destinations by selecting **Setup**. (See " (a) Registering preset destinations" on page 120.)


You can change the name, location, phone number and icon. (See " (b) Editing preset destinations" on page 121.)

The registered points can be used on the "Destination" screen. (See " — Destination search by Preset destinations" on page 68.)


— Operation flow: guiding the route



1 Push the “MENU” button.

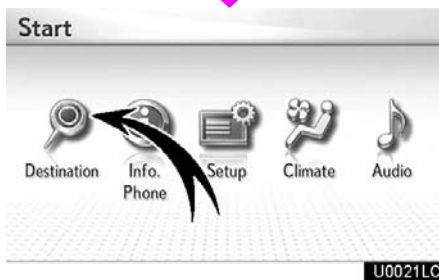


2 Select “Destination” and push the “ENTER” button.

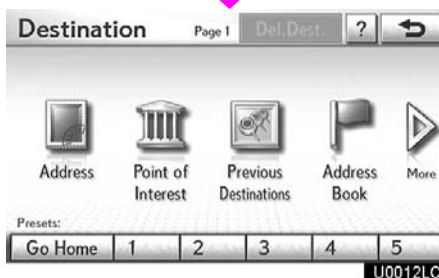

3 There are 10 different methods to search destinations.

See “Destination search” on page 66.

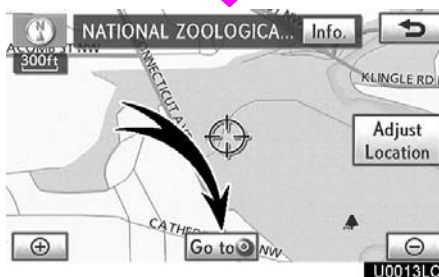

4 Select “Go to ☉” and push the “ENTER” button.

The navigation system performs a search for the route.




- 5 Select “OK” and push the “ENTER” button, and start driving.**

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 86.)

- 6 Guidance to the destination is given via voice and on the guidance screen.**


— Setting home as the destination

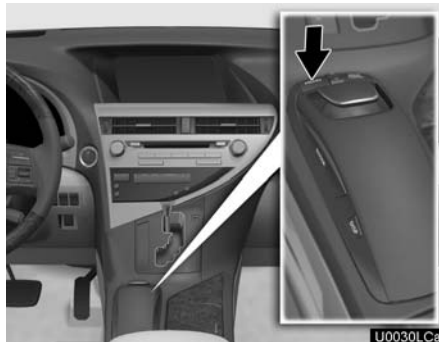

1 Push the “MENU” button.




2 Select “Destination” and push the “ENTER” button.

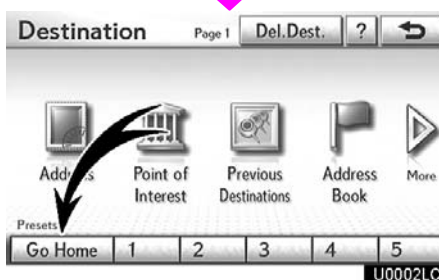

3 Select “Go Home” and push the “ENTER” button.

“Go Home” can be used if your home has been registered. (To register “Home”, see “(a) Registering home” on page 117.)

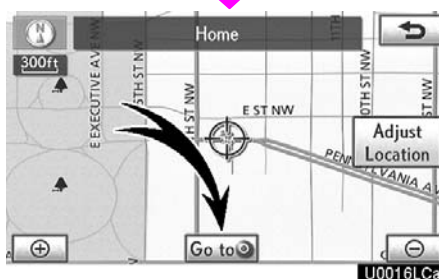

4 Select “Go to” and push the “ENTER” button.

The navigation system performs a search for the route.



- 5 Select “OK” and push the “ENTER” button, and start driving.

Routes other than the one recommended can also be selected. (See “Starting route guidance” on page 86.)

- 6 Guidance to the destination is given via voice and on the guidance screen.